



Outdoor Playhouse


Item# 00132A

Assembly Instructions

Please retain this information for future reference

To order replacement parts, please visit www.kidkraft.com

2 - 8 years

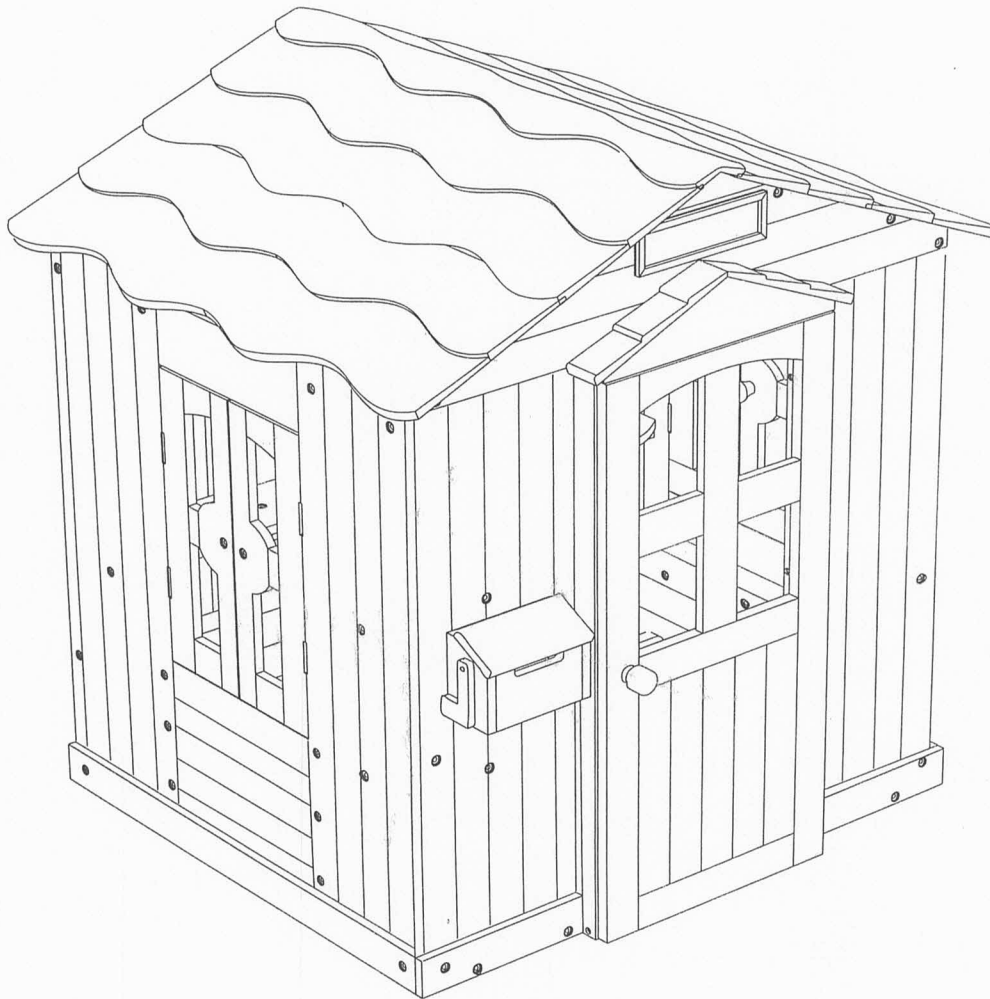

**ADULT SUPERVISION REQUIRED.
FOR OUTDOOR USE ONLY.**

**Customer Service
1-800-933-0771
www.kidkraft.com**

CAUTION: Adult Assembly Required. Hardware contains small screws with sharp points. Keep unassembled parts out of reach of small children. Parts of product can present dangers if it is not correctly assembled.

USE AND MAINTENANCE:
-Use on level surfaces only
-Please check assembly at regular intervals, and frequently tighten hardware if necessary. If maintenance is not carried out, the product could cease to function properly.

WARNING: CHOKING HAZARD
Small parts and sharp points, not suitable for children under 3 years.

